

To set the time

- 1. Pull the crown out to the second
- At this time, the second hand will move to the 12 o'clock position and
- stop there.

 2. Set the hands by rotating the crown. Rotate the crown to move the hands clockwise. Move the minute hand clockwise. Move the minute hand four or five minutes past the time you want to set, and then back it up to the proper setting.

 
 • Carefully set the time, making sure to distinguish between AM and PM.
- Push the crown back in to the normal position to restart timekeeping

To set the day

- 1. Pull the crown out to the first click.
 2. Set the day by rotating the crown towards you.
 3. Push the crown back in to the normal position.

 Avoid changing the date setting while the current time is between 9:00 p.m. and 1:00 a.m.

Using the Stopwatch



The stopwatch lets you measure elapsed time up to 11 hours, 59 minutes, 59.95

- Press (A) to start the stopwatch.
 Press (A) to stop the stopwatch.
- You can resume the measurement operation by pressing (A) again.
 The stopwalch 1/20 second hand rotates and indicates the 1/20 second count during the first 30 seconds.

 Check the elapsed time.
- - The example below shows an elapsed time of two minutes, 18.80 seconds.



Press ® to reset the stopwatch.
This will enter the Timekeeping Mode.
To return the function of the stopwatch 1/20 second hand to the timekeeping seconds hand (indicating the current seconds count), press ® again.

- Notes:

 Do not try to perform stopwatch operations while the crown is pulled out either to the first or second click. If you try to press a button, you might accidentally cause the crown to rotate and change the current time or day setting.

 If the starting positions of the stopwatch second hand and 1/20 second hand become misaligned, use the following procedures to adjust the positions of the hands so they point to 12 o'clock when the stopwatch is reset.

To adjust the positions of the stopwatch hands

- vaujust the positions of the stopwatch hands.

 Press (a) to reset the stopwatch, and check the alignment of the stopwatch second hand and 1/20 second hand.

 Pull out the crown to the second click.

 Press (a) to move the stopwatch second hand.

 Press (b)

- 4. Press (a).

 5. If the stopwatch 1/20 second hand is aligned correctly, proceed to step 6. If the stopwatch 1/20 second hand is also misaligned, press (a) to move the stopwatch
- 1/20 second hand.

 1. After making the adjustments you want, push the crown back in to its normal position.

 Note that pulling the crown out also stops the timekeeping second hand. After performing the above procedure, you should also adjust the timekeeping setting.

the elapsed time bezel which the minute hand points to. The elapsed time is indicated.



- Some water resistant models are equipped with a screw lock
- With such models, you must unscrew the crown in the
- With such models, you must unscrew une crown in the direction noted in the illustration to loosen it before you can pull it out. Do not pull too forcibly on such crowns.

 Also note that such watches are not water resistant while their crowns are loosened. Be sure to screw the crowns back in as far as they will go after making any setting.

